

5. **Limo Mode:** Touch to turn Limousine mode On and Off.

When limousine mode is turned on, the rear passengers will have control of the total cabin Audio system, and any shared sources via the remote control.

6. **Lock:** Touch to lock or unlock the Rear media remote control.
7. **System:** Touch to switch the selected Rear media system on or off.
8. Forward/Skip for the selected screen.
9. Touch to play the right rear screen's audio through the vehicle's speaker system.
- Note:** Only available when the Rear media system is in **Limo mode**.*
10. **Source:** Touch to select the Rear media source selection menu.
11. Play/Pause for the selected screen.
12. Touch to play the left rear screen's audio through the vehicle's speaker system.
- Note:** Only available when the Rear media system is in **Limo mode**.*
13. Rewind/Skip for the selected screen.
14. Rear media source selection menu: Touch the required media button.
15. **Source:** Touch to return to the **Rear media** control screen.

REAR MEDIA REMOTE CONTROL

The Rear media remote control can also be used to switch the selected audio between the vehicle's speaker system, and the Rear media headphones. To switch between the two outputs, press button (15) on the Rear media remote control.

For more information, refer to the **REAR MEDIA REMOTE CONTROL** section of the Owner's Handbook.

INCONTROL OVERVIEW

InControl™ uses Smartphone and in-vehicle mobile technology, to remotely connect your vehicle to a number of services and convenience features.

InControl has 3 main features:

- InControl Remote.
- InControl Secure.
- InControl Wi-Fi.

If InControl has not been pre-registered by your Dealer, or you are not the first owner of the vehicle, you will need to visit

www.landroverincontrol.com/owner to create an account. Once your account has been created, follow the on-screen instructions to connect your account to your vehicle, and to activate InControl.

***Note:** 100% mobile connectivity cannot be guaranteed in all locations.*

***Note:** It is the owner's responsibility to remove the vehicle from your InControl account when ownership of the vehicle is transferred.*