

WARNING LAMPS



Lane departure warning (green)

Illuminates to indicate that the Lane departure warning system is monitoring the indicated lane edge.



Lane departure warning (red)

Illuminates if the Lane departure warning system detects the vehicle is crossing the indicated lane edge. The red warning lamp is accompanied by a vibration of the steering wheel.

TOUCH SCREEN USE

Note: Do not wear gloves when operating the Touch screen.

TOUCH SCREEN SETUP

Select **Setup** from the Touch screen **Home menu**. The **Setup** screen is divided into the following categories:

- Screen.
- System.
- Voice.
- Audio.
- Conversation assist.

CONVERSATION ASSIST

Conversation assist enables the front and rear occupants to speak to each other, aided by the vehicle's Audio system.

The Conversation assist controls can be found in the Touch screen **Setup** menu. See **5**, **TOUCH SCREEN SETUP**.

Conversation assist offers 3 options:

- **Off:** Touch to switch the system On/Off.
- **Low:** Touch to select low volume.
- **High:** Touch to select high volume.

IF THE ENGINE FAILS TO START

Note: If the engine fails to crank when the engine **START/STOP** button is pressed, and there has been a recent collision, seek qualified assistance.