

TYRE PRESSURE CHECK

The Instrument panel can be used to display the vehicle's tyre pressures. The tyre pressure figures can be accessed through the Instrument panel menu.

For more information, refer to the **INSTRUMENT PANEL MENU** section of the Owner's Handbook,

When selected, the last known tyre pressures will be displayed, alongside the recommended cold tyre pressures (in brackets).

Note: *If any of the wheels or tyres have been removed, the displayed tyre pressures may not be valid. Drive the vehicle for at least 15 minutes in order to re-calibrate the system.*

RECOMMENDED TYRE PRESSURE LOOK-UP

The Instrument panel can be used to display the recommended cold tyre pressures for your vehicle. The tyre pressure look-up table can be accessed through the Instrument panel menu.

For more information, refer to the **INSTRUMENT PANEL MENU** section of the Owner's Handbook,




Depending on the specification of your vehicle, a number of different values may be displayed to reflect different driving conditions, for example, high speed driving or for a heavily laden vehicle.



The tyre pressures displayed in the Instrument panel will not be valid if non-approved Land Rover wheels or tyres are fitted to your vehicle.

WHEEL CHANGING

If your vehicle is fitted with side tubes, fixed side steps, or deployable side steps, the standard vehicle jacking points will be obscured.

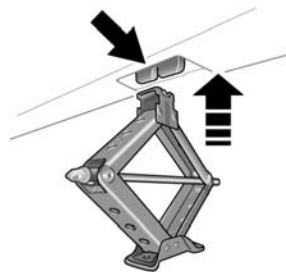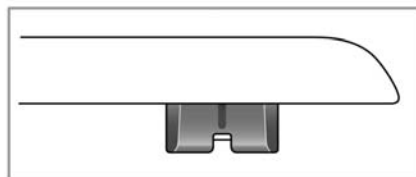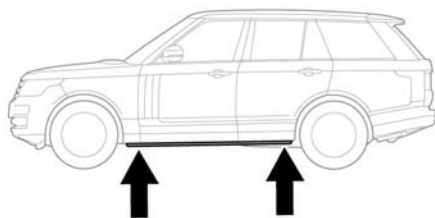

SL2304

To raise the vehicle, use the jacking points located on the front and rear of the side tubes, fixed side steps, or deployable side steps.



The deployable side steps must be in the stored position, and the system switched off, when raising the vehicle. Do not raise the vehicle with the deployable side steps in the deployed position.