


## DRIVER CONTROLS

1. Front interior lamps.
2. InControl remote - Breakdown call.
3. Sunroof.
4. Roof blind.
5. InControl remote - SOS emergency call.
6. Lighting/direction indicator/Trip computer.
7. Message centre control.
8. Instrument panel, warning lamps and Message centre.
9. Cruise control/Adaptive Cruise Control (ACC).
10. Wiper/washer controls.
11. Engine START/STOP.
12. Touch screen.
13. Front climate control.
14. Climate control menu.
15. Hazard warning lamps.
16. Front heated/climate seat menu.
17. Glove box release.
18. CD eject.
19. Climate control.
20. Gear selector.
21. Terrain response.
22. Low range transmission.
23. Automatic Speed Limiter (ASL).
24. Intelligent stop/start.
25. Electric Parking Brake (EPB).
26. Air suspension control.
27. Dynamic Stability Control (DSC) off.
28. Hill Descent Control (HDC).
29. Audio on/off and volume.
30. Paddle shift up.
31. Heated steering wheel.
32. Steering column adjuster.
33. Horn.
34. Telephone and voice recognition.
35. Paddle shift down.
36. Interior illumination control.
37. Lane departure warning on/off.
38. Tailgate release (manual), open/close (powered).
39. Bonnet release lever.
40. Central locking switches.
41. Driving position memory.
42. Window controls.
43. Rear windows isolation and child door locks.
44. Mirror adjuster/power-fold mirror.

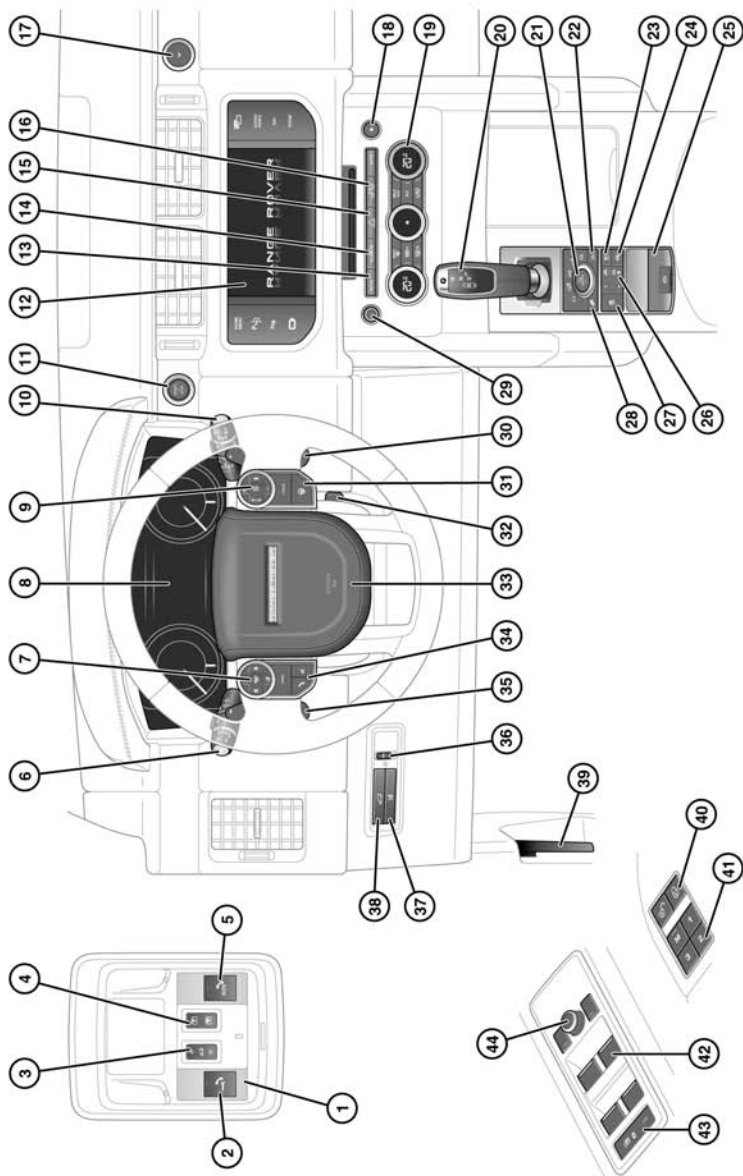

SL2000

