

## INCONTROL REMOTE

InControl Remote comprises the following:

- A Remote Smartphone App.
- A breakdown call feature.
- An SOS Emergency call feature.

### Remote Smartphone App

The Remote Smartphone App has a number of different features, including:

- A remote fuel level and range check.
- A vehicle locator, to help you find your vehicle in a busy car park.
- An SMS text message service, to inform you if you have left any windows or doors open.
- A trip detail download feature, to assist if you need to claim business mileage expenses.

The InControl Remote Smartphone App can be downloaded for Apple's iPhone™ from the Apple App Store, or for Android phones, from Google Play.

**Note:** iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.

### Breakdown call



Located in the overhead console.  
See **22, DRIVER CONTROLS**.

In the event of a breakdown, press and release the button cover to reveal the button. The button will be illuminated by a white LED. Press the button for 2 seconds to call. Your location and the vehicle's details will automatically be provided to Land Rover Assistance.

When a call is initiated, the button will flash amber. The button will be constantly illuminated amber during a call.

Push the button cover back into place after use.

### SOS emergency call



Located in the overhead console.  
See **22, DRIVER CONTROLS**.

In the event that your personal safety or security is at risk, press and release the button cover to reveal the button. The button will be illuminated by a red LED. Press the button for 2 seconds to call. Your location and the vehicle's details will automatically be provided to the emergency services.

When a call is initiated, the button will flash amber. The button will be constantly illuminated amber during a call.

Push the button cover back into place after use.

**Note:** In the event that any of the vehicle's air bags are deployed, or a crash is detected, an SOS emergency call will be automatically triggered.

**Note:** If you are traveling in a different country, a call will still connect, however the vehicle's location and details may not be automatically sent.