

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

## HIGH BEAM ASSIST (GREEN)



Illuminates when the auto high beam feature has switched on the high beams.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

## INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

**Note:** Other warnings normally associated with an engine shutdown, for example the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent stop/start system.

## GEAR SHIFT (GREEN)



The gear shift indicator illuminates briefly at the recommended gear change point (upshift).

The shift indicator will not illuminate whilst Cruise control is active and not being overridden by pressing the throttle pedal.

**Note:** This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.

## HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met. See **138, HDC CONTROLS**.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

## LOW RANGE (GREEN)



Illuminates when Low range has been selected.

## CRUISE CONTROL (GREEN)



Illuminates when cruise control or Adaptive cruise control is active.

## FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

## TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.