


## LUGGAGE COMPARTMENT FUSE BOX

## FUSE BOX (upper)

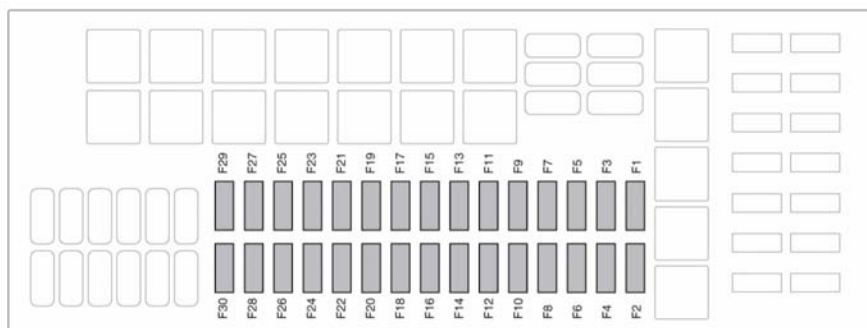


E162827

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F1	-	-	-
F2	25	White	Heated front seat. Climate front seat.
F3	25	White	Heated rear seat. Climate rear seat.
F4	15	Blue	Heated rear seat. Torch socket.
F5	15	Blue	Trailer.
F6	15	Blue	Fuel pump (V8 diesel only).
F7	5	Tan	Chassis control module.
F8	15	Blue	Front seat.
F9	-	-	-
F10	-	-	-
F11	-	-	-
F12	-	-	-
F13	-	-	-
F14	10	Red	Headlamps. Parking aid. Blind Spot Monitor (BSM). Rear view mirror. Proximity camera.

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F15	15	Blue	Fuel pump (diesel only).
	30	Green	Fuel pump (petrol only).
F16	5	Tan	Adaptive Cruise Control (ACC).
F17	30	Green	Passenger front seat.
F18	30	Green	Rear blower motor.
F19	30	Green	Electric Parking Brake (EPB).
F20	10	Red	Chassis control module.
F21	30	Green	Electric Parking Brake (EPB).
F22	15	Blue	Trailer.
F23	15	Blue	Chassis control module.
F24	15	Blue	Event data recorder. Vehicle tracker.
F25	30	Green	Deployable sidesteps.
F26	20	Yellow	Rear wiper.
F27	30	Green	Rear seat (left-side).
F28	30	Green	Rear seat (left-side).
F29	30	Green	Rear seat (right-side).
F30	30	Green	Rear seat (right-side).

## FUSE BOX (lower)

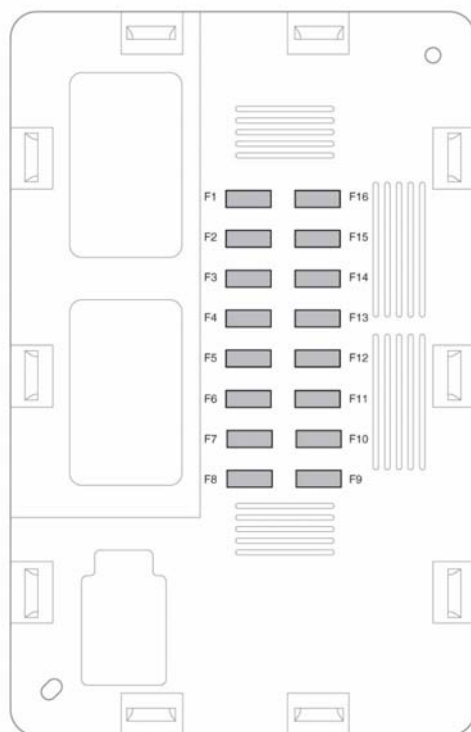

E162828

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F1A	15	Blue	Touch screen. Front integrated control panel.
F2A	10	Red	Audio amplifier.
F3A	-	-	-
F4A	10	Red	Digital radio. Navigation. Television tuner.
F5A	15	Blue	Audio head unit.
F6A	15	Blue	Audio video input/output panel.
F7A	-	-	-
F8A	-	-	-
F9A	-	-	-

## Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
F10A	-	-	-
F11A	-	-	-
F12A	-	-	-
F13A	-	-	-
F14A	-	-	-
F15A	15	Blue	Front integrated control panel. Rear integrated control panel. Heating and ventilation.
F16A	20	Yellow	Fuel fired booster heater.