
ELECTRIC WINDOWS

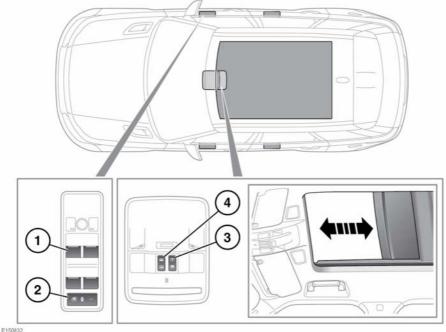

E150032

- 1. Window switches:
 - To open a window: Press lightly at the front of the switch and release.
 - To close a window: Pull up lightly at the front of the switch and release.
 - One touch open and close; Press or pull firmly at the front of the switch and release.

Note: The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

2. Rear window isolator button.

Note: This will also isolate rear seat adjustment.

⚠

If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.



To prevent accidental operation, never leave the Smart key in the vehicle if children or animals are also left in the vehicle.

- 3. Panoramic roof blind switch:
 - To open the blind in small increments, press lightly at the rear of the switch, and release.