
ELECTRIC WINDOWS

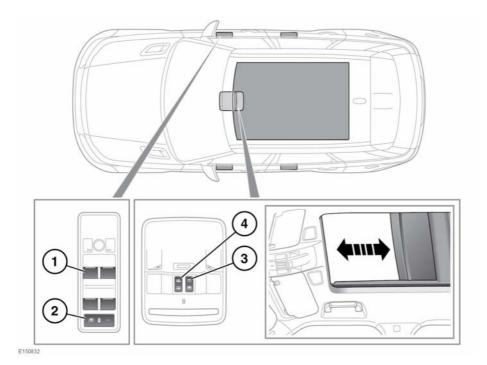

1. Window switches:

- To open a window: Press lightly at the front of the switch and release.
- To close a window: Pull up lightly at the front of the switch and release.
- One touch open and close; Press or pull firmly at the front of the switch and release.

Note: The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

2. Rear window isolator button.

Note: This will also isolate rear seat adjustment.



If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.



To prevent accidental operation, never leave the Smart key in the vehicle if children or animals are also left in the vehicle.

- 3. Panoramic roof blind switch:
 - To open the blind in small increments, press lightly at the rear of the switch, and release.