

INCONTROL OVERVIEW



In the interests of safety, only operate, adjust, or view the system when it is safe to do so.



Do not allow the system to distract the driver while the vehicle is moving. Driver distraction can lead to accidents causing serious injury or death.

InControl™ uses Smartphone and in-vehicle mobile technology, to remotely connect your vehicle to a number of services and convenience features.

InControl has 4 main features:

- InControl Remote.
- InControl Secure.
- InControl Wi-Fi.
- InControl Apps.

If InControl has not been pre-registered by your Dealer, or you are not the first owner of the vehicle, you will need to visit

www.landoverincontrol.com/owner to create an account. Once your account has been created, follow the on-screen instructions to connect your account to your vehicle, and to activate InControl.

Note: 100% mobile connectivity cannot be guaranteed in all locations.

Note: It is the owner's responsibility to remove the vehicle from your InControl account when ownership of the vehicle is transferred.

INCONTROL REMOTE

InControl Remote comprises the following:

- A Remote Smartphone App.
- A breakdown call feature.
- An SOS Emergency call feature.

Remote Smartphone App

The Remote Smartphone App has a number of different features, including:

- A remote fuel level and range check.
- A vehicle locator, to help you find your vehicle in a busy car park.
- An SMS text message service, to inform you if you have left any windows or doors open.
- A journey detail download feature, to assist if you need to claim business mileage expenses.

The InControl Remote Smartphone App can be downloaded for Apple's iPhone from the Apple App Store, or for Android phones, from Google Play.

Note: iPhone is a trademark of Apple Computer Inc., registered in the U.S. and other countries.

Breakdown call



Located in the overhead console. See **314, DRIVER CONTROLS**.

In the event of a breakdown, press and release the button cover to reveal the button. The button will be illuminated by a white LED. Press the button for 2 seconds to call. Your location and the vehicle's details will automatically be provided to Land Rover Assistance.

When a call is initiated, the button will flash amber. The button will be constantly illuminated amber during a call.

Push the button cover back into place after use.

SOS emergency call



Located in the overhead console. See **314, DRIVER CONTROLS**.