

**Note:** Avoid touching the antenna when operating the **ON** or **OFF** button.

The remote control has an approximate range of 100 metres. There is no need to point the remote control at the vehicle.

Press and hold the **ON** button for approximately 2 seconds. The LED will illuminate green to confirm that a remote climate program has been initiated. The LED flashes once every 2 seconds to indicate that the heater is active.

The remote climate program will continue for 20-30 minutes, after which it will switch off automatically to prevent the vehicle battery from discharging. It also turns off automatically if the engine is started.

The LED indicator signals various states and conditions for the remote climate as follows:


- Illuminates green when the **ON** button is pressed, then quickly flashes green to indicate that heater operation has been requested.
- Illuminates green followed by red when the **OFF** button is pressed to indicate that the heater has been requested to shut down.
- Illuminates green, then quickly flashes red when either the **ON** or **OFF** button is pressed to indicate that there is no communication with the receiver. This normally occurs if the vehicle is too far away.
- Illuminates green, then slowly flashes red when either the **ON** or **OFF** button is pressed to indicate that there is an error.
- Flashes red when either the **ON** or **OFF** button is pressed to indicate the timer climate remote battery needs replacing.

**Note:** The timed Climate remote will only operate once per engine start to maintain battery condition.

## ADDITIONAL REMOTES

Extra remote controls can be programmed to operate the heater. A maximum of 4 remote controls can be programmed to the vehicle. Contact a Dealer/Authorised Repairer to purchase extra remote controls and have them programmed to the vehicle.

## REPLACING THE REMOTE BATTERIES

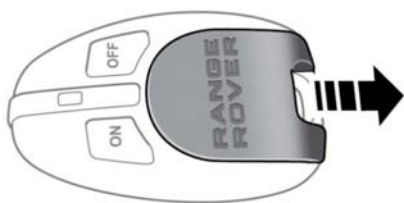

E144902

With the front of the remote control facing upwards, press down on the rear of the access cover and push completely off to reveal the battery compartment. Note that the battery should be inserted with the positive side facing upwards. Remove the old battery and make sure the correct polarity is maintained, insert a new, unused 3 volt CR2032 battery. Align and push the cover back to the original position.