


INTERIOR LIGHTS

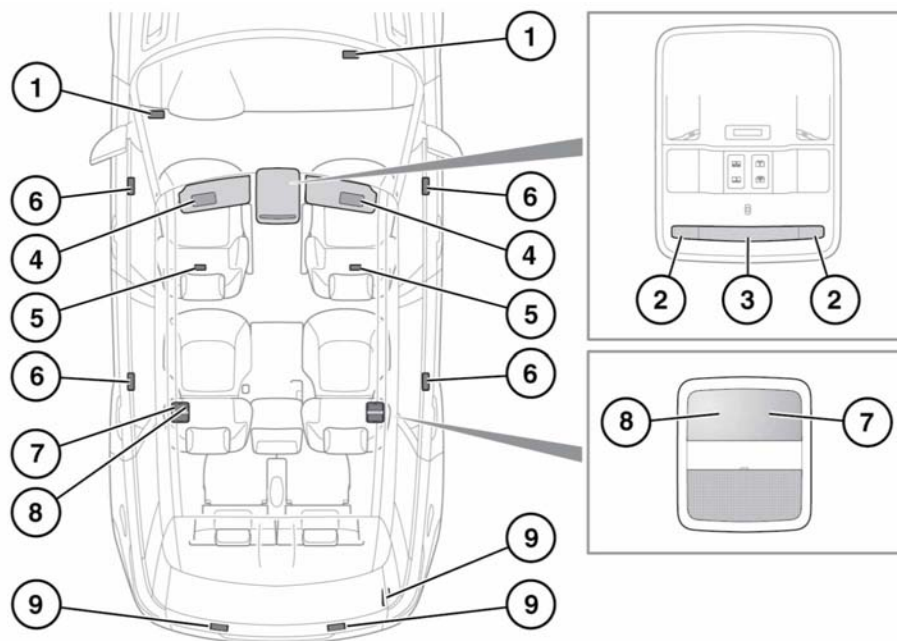

E150831

1. Front seat footwell lamps: Automatically illuminate when the doors are opened.
2. Front reading lamps: Touch the left or right hand side of the sensor lens briefly to switch on/off.

Note: To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.

3. Front courtesy lamp: Touch the centre of the sensor lens briefly to switch on/off. To switch automatic illumination on/off, touch the centre of the sensor lens until the light flashes, which confirms selection. In Auto mode the lamps will illuminate when a door is opened.

Note: To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.

4. Vanity mirror lamp: Slide the cover open/shut for on/off.
5. Rear seat footwell lamps: Automatically illuminate when the doors are opened.
6. Puddle lamps: Automatically illuminate when the doors are opened.
7. Rear reading lamps: Touch the sensor lens briefly to switch on/off.

Note: To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.