
## Interior lights

## INTERIOR LIGHTS

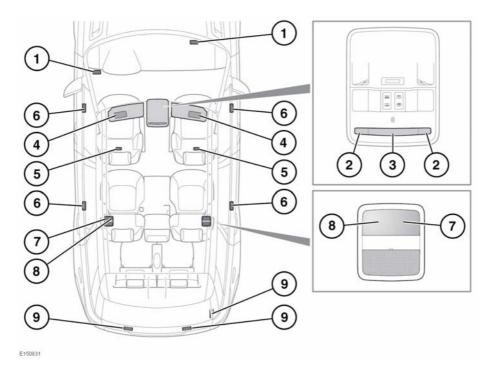

- 1. Front seat footwell lamps: Automatically illuminate when the doors are opened.
- Front reading lamps: Touch the left or right hand side of the sensor lens briefly to switch on/off.

**Note:** To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.

 Front courtesy lamp: Touch the centre of the sensor lens briefly to switch on/off. To switch automatic illumination on/off, touch the centre of the sensor lens until the light flashes, which confirms selection.
In Auto mode the lamps will illuminate when a door is opened. **Note:** To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.

- **4.** Vanity mirror lamp: Slide the cover open/shut for on/off.
- **5.** Rear seat footwell lamps: Automatically illuminate when the doors are opened.
- **6.** Puddle lamps: Automatically illuminate when the doors are opened.
- **7.** Rear reading lamps: Touch the sensor lens briefly to switch on/off.

**Note:** To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.