
Interior lights

INTERIOR LIGHTS

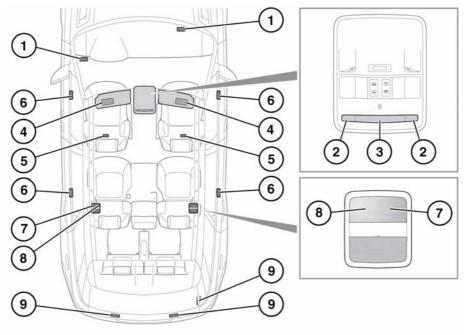

E150831

- 1. Front seat footwell lamps: Automatically illuminate when the doors are opened.
- Front reading lamps: Touch the left or right hand side of the sensor lens briefly to switch on/off.

Note: To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.

 Front courtesy lamp: Touch the centre of the sensor lens briefly to switch on/off. To switch automatic illumination on/off, touch the centre of the sensor lens until the light flashes, which confirms selection. In Auto mode the lamps will illuminate when a door is opened. *Note:* To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.

- 4. Vanity mirror lamp: Slide the cover open/shut for on/off.
- **5.** Rear seat footwell lamps: Automatically illuminate when the doors are opened.
- **6.** Puddle lamps: Automatically illuminate when the doors are opened.
- 7. Rear reading lamps: Touch the sensor lens briefly to switch on/off.

Note: To complete the operation, move your finger at least 20 mm (0.8 inches) from the lens.