


UNDER BONNET COVERS - REMOVAL

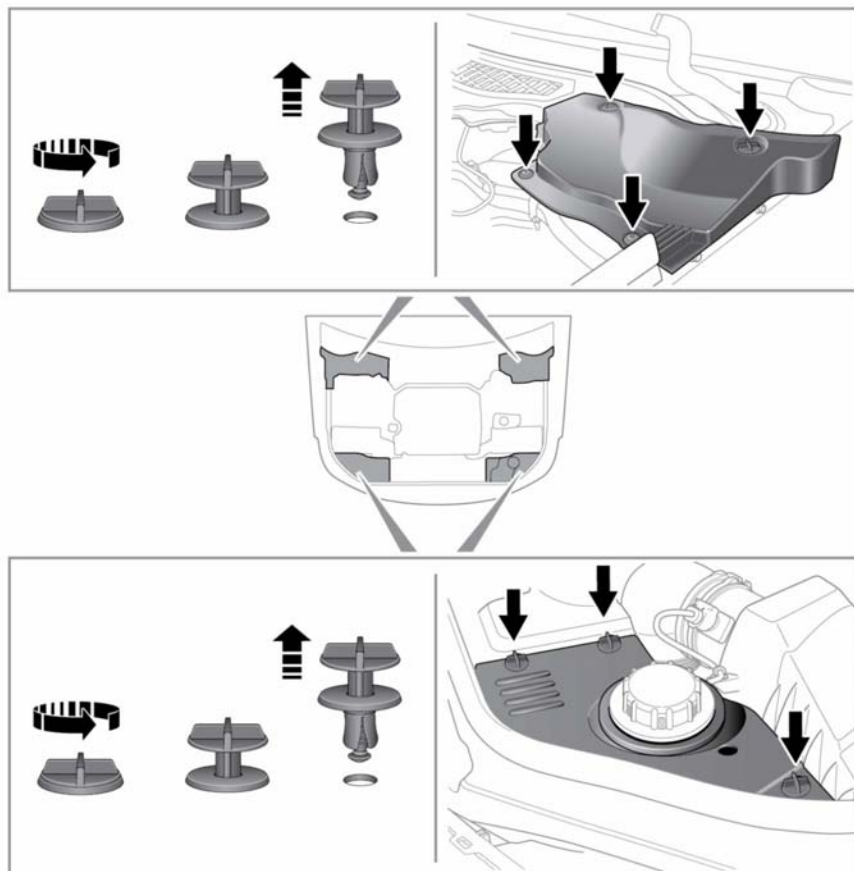

E151131

1. Release and remove the turnbuckle clips securing the cover.
2. Lift the front edge of the cover and slide forwards to remove.

UNDER BONNET COVERS - REFITTING



Before refitting the under bonnet covers, make sure that no pipes, cables or other items, have been trapped between the cover and the casing.

1. Place the cover over the casing, make sure that the 4 holes are aligned.