


## TELEPHONE SYSTEM OVERVIEW

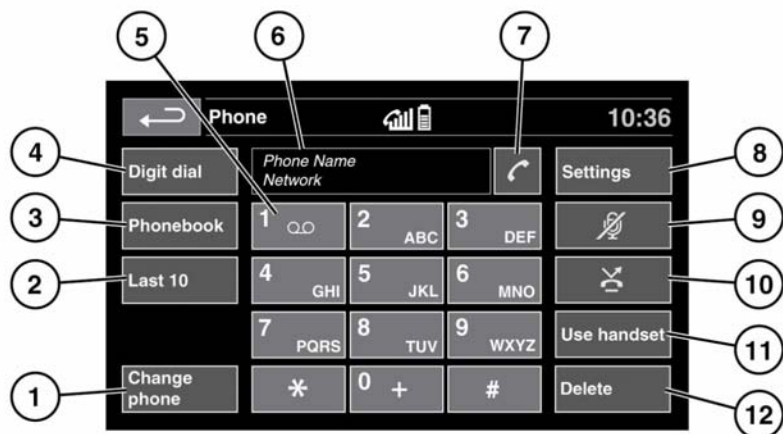

E157295

- 1. Change phone:** Search for a new phone, or change to another paired phone.
- 2. Last 10:** Access the last 10 dialed, received and missed calls.
- 3. Phonebook:** Access the downloaded phonebook.
- 4. Digit dial:** Access the Digit dial mode.
- 5.** Touch and hold to retrieve your Voice mail.
- 6. Status display:** Displays the name and/or number dialed and call duration.
- 7.** Call Connect/Disconnect icons. Touch to send/accept or end/reject a call.
- 8. Settings:** Access the Voice mail set up, Answer options and Phone options.
- 9. Mute microphone:** Initiate Privacy mode. While selected, the caller will not hear you talking.
- 10.** Auto reject. When active, any incoming calls will be rejected or diverted to voice mail (dependent on the current mobile phone settings).

- 11. Use handset:** Switch the call to your mobile phone.
- 12. Delete:** Touch to delete the last entered digit, and hold to delete the whole entered number.

## BLUETOOTH® INFORMATION



**Bluetooth®** is the name for short-range radio frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover **Bluetooth** wireless technology system supports **Bluetooth®** Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

**Note:** HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via 1, while a media device can be connected via the other, at the same time.