

# Heating and ventilation

If fitted, rear heated seats (non-climate) can only be operated using the switches located on the rear of the centre console.

## Heated ventilation:

- Touch the up arrow icon to switch heated ventilation on at maximum (3 red bars).
- Touch the down arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the down arrow a third time to switch off seat ventilation.

## Cooled ventilation:

- Touch the down arrow icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the up arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the up arrow a third time to switch off seat ventilation.

## Seat zone selection:

- If fitted with climate seats, constant selection of the **Seat zone** soft key will scroll through the 3 choices of seat zone; full seat, cushion, or back rest only.

## AUXILIARY HEATER

Your vehicle may be fitted with an auxiliary heater which is powered by fuel drawn from the vehicle's tank. The heater operates at low ambient temperatures. Alternatively, it can be controlled by the Timed climate control system, or from the Timed climate remote control.

When the heater is operating, exhaust fumes from the heater may be visible exiting from under the front of the vehicle. This is normal and is not a cause for concern.



**Do not operate the auxiliary heater when refuelling the vehicle. Doing so may cause fuel vapours to combust causing a fire/explosion.**



**Do not operate the auxiliary heater while the vehicle is in an enclosed space. Doing so can cause a build-up of highly toxic fumes which may cause unconsciousness or death.**

## TIMED CLIMATE CONTROL

The timed climate control system provides a comfortable temperature inside the cabin in advance of the driver and passengers entering the vehicle.

The auxiliary heater is also operated to warm the engine and aid starting in very cold conditions.

**Note:** *If the auxiliary heater is used to warm the engine, the cabin will not be warmed.*

The timed climate control system is set and controlled by the Touch screen. It can also be activated/deactivated by the Timed climate remote control.

**Note:** *The time setting can only be adjusted via the Touch screen.*

The system may not operate or will switch off automatically in the following scenarios.

- If the fuel level is low.
- If the vehicle's battery charge is low.
- If the coolant temperature is at or above its required temperature.

## SETTING A TIME FOR TIMED CLIMATE OPERATION

The Touch screen can be used to either preset activation times or to operate the system manually.