
## Rear seats

## MASSAGE SEATS

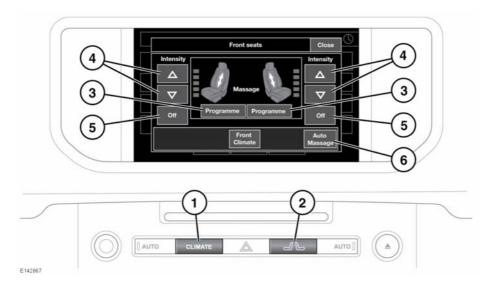

**Note:** Seat massage may not operate when the vehicle's interior temperature is below 0°C or above 50°C (32°F or 122°F respectively.

Seat massage is controlled through the Touch screen. Either:

- Press to display the Front climate menu. Touch the Seats soft key, then touch the Massage soft key. Or;
- Press to display the Front seats pop-up menu. Then touch the Massage soft key.
  - The pop-up menu screens will overlay the current screen. They will time out after a short period, and the previous menu screen will be displayed.
- Touch to display the desired Seat massage program. Constant selection will scroll through the five different programs.
- **4.** Touch to vary the intensity of the selected program.
- 5. Touch to end the program.

6. Touch to display the Auto massage menu. This allows the driver's seat Auto massage to be switched On or Off. The menu also allows you to set the time delay from the start of the journey to 5, 15, 30, or 60 minute intervals.

After 10 minutes, Seat massage will stop automatically.