

From 2 000 km (1 200 miles) to 3 000 km (2 000 miles):

- Engine and road speeds can be increased gradually.
- Engine speeds in excess of 5 000rpm should only be used briefly e.g. when overtaking.

At all times, not just during the running-in period:

- Do not exceed 4 000 rpm until the engine has reached full operating temperature.
- Avoid labouring the engine by operating the engine in too high a gear at low speeds.
- Do not exceed 4 000 rpm until the engine has reached full operating temperature.
- Avoid labouring the engine by operating the engine in too high a gear at low speeds.

## OWNER MAINTENANCE



Any significant or sudden drop in fluid levels, or uneven tyre wear, should be reported to a qualified technician without delay.

In addition to the routine maintenance, a number of simple checks must be carried out more frequently.

## DAILY CHECKS

- Operation of lamps, horn, direction indicators, wipers, washers and warning lamps.
- Operation of seat belts and brakes.
- Look for fluid deposits underneath the vehicle that might indicate a leak.

## WEEKLY CHECKS

- Engine oil level.
- Engine coolant check.
- Brake fluid level.

- Dynamic response fluid level.
- Screen washer fluid level.
- Tyre pressures and condition.
- Operate air conditioning.

**Note:** *The engine oil level should be checked more frequently if the vehicle is driven for prolonged periods at high speeds.*

## BRAKE PADS

It is recommended that brake pads should be replaced when they reach a minimum thickness of 3mm.

## WHEEL BALANCING

**Note:** *All wheel assemblies must be dynamically balanced.*

Balance Weight	Inner	Outer
Minimum	10g	10g
Maximum	120g	120g

## ARDUOUS DRIVING CONDITIONS

When a vehicle is operated in extremely arduous conditions, more frequent attention must be paid to servicing requirements.

Arduous driving conditions include:

- Driving in dusty and/or sandy conditions.
- Driving on rough and/or muddy roads and/or wading.
- Driving in extremely hot/cold conditions.
- Towing a trailer or driving in mountainous conditions.
- Driving in areas using road salt or other corrosive materials on the driving surface.

Contact a Land Rover Dealer/Authorised Repairer for advice.