

From 2 000 km (1 200 miles) to 3 000 km (2 000 miles):

- Engine and road speeds can be increased gradually.
- Engine speeds in excess of 5 000rpm should only be used briefly e.g. when overtaking.

At all times, not just during the running-in period:

- Do not exceed 4 000 rpm until the engine has reached full operating temperature.
- Avoid labouring the engine by operating the engine in too high a gear at low speeds.
- Do not exceed 4 000 rpm until the engine has reached full operating temperature.
- Avoid labouring the engine by operating the engine in too high a gear at low speeds.

OWNER MAINTENANCE



Any significant or sudden drop in fluid levels, or uneven tyre wear, should be reported to a qualified technician without delay.

In addition to the routine maintenance, a number of simple checks must be carried out more frequently.

DAILY CHECKS

- Operation of lamps, horn, direction indicators, wipers, washers and warning lamps.
- Operation of seat belts and brakes.
- Look for fluid deposits underneath the vehicle that might indicate a leak.

WEEKLY CHECKS

- Engine oil level.
- Engine coolant check.
- Brake fluid level.

- Dynamic response fluid level.
- Screen washer fluid level.
- Tyre pressures and condition.
- Operate air conditioning.

Note: The engine oil level should be checked more frequently if the vehicle is driven for prolonged periods at high speeds.

BRAKE PADS

It is recommended that brake pads should be replaced when they reach a minimum thickness of 3mm.

WHEEL BALANCING

Note: All wheel assemblies must be dynamically balanced.

Balance Weight	Inner	Outer
Minimum	10g	10g
Maximum	120g	120g

ARDUOUS DRIVING CONDITIONS

When a vehicle is operated in extremely arduous conditions, more frequent attention must be paid to servicing requirements.

Arduous driving conditions include:

- Driving in dusty and/or sandy conditions.
- Driving on rough and/or muddy roads and/or wading.
- Driving in extremely hot/cold conditions.
- Towing a trailer or driving in mountainous conditions.
- Driving in areas using road salt or other corrosive materials on the driving surface.

Contact a Land Rover Dealer/Authorised Repairer for advice.