


## DAB RADIO CONTROLS

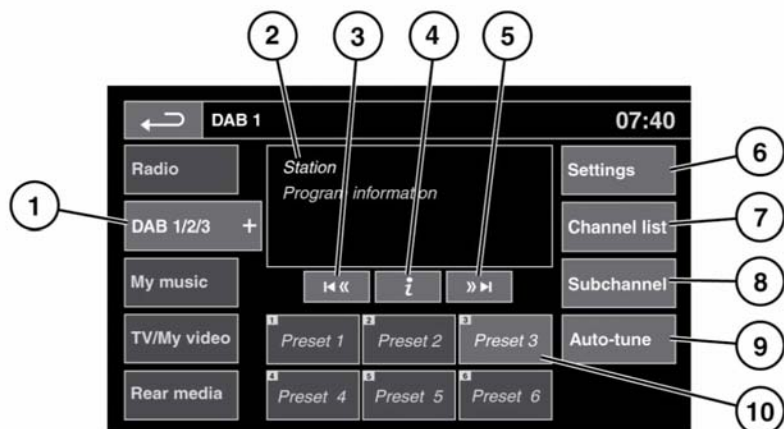

E151973

**Note:** Some types of body mounted accessories (for example, external luggage compartment stowage devices) may affect the performance of this system.

Press the **AUDIO/VIDEO** button, or touch the **Audio/Video** icon from the Touch screen **Home** menu and then select the **DAB Radio** icon.

1. **DAB 1/2/3:** Touch to view and select a DAB band (**DAB 1**, **2** or **3**). The radio will tune to the last used channel on that band. Touch again to close.
2. Display showing the current channel, the associated ensemble and relevant DAB radio text.
3. Seek down:
  - Short touch to seek a previous available channel.
  - Long touch to seek previous available ensemble. The first channel in the new ensemble will be selected.
4. Channel information: Touch to view DAB text and channel information.

5. Seek up:
  - Short touch to find the next available channel.
  - Long touch to find the next available ensemble. The first channel in the new ensemble will be selected.
6. **Settings:** Touch to view the DAB Settings menu:
  - **Options:** To activate/deactivate **FM Traffic** and **Link DAB** and to alter **DAB country** and **format** settings (with the vehicle stationary).
  - **Announcements:** Select an alarm announcement and up to 3 other announcement types (traffic, news etc.) from the list. The selected announcements will interrupt the current programme when broadcast.
7. **Channel list:** Touch to view a list of available ensembles and channels. The list can be sorted by **Ensemble**, **Channel**, **Subchannel** or by **Category**.