

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorise the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

VOICE GUIDANCE

To turn Voice guidance on or off, but maintain Route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when Voice guidance is enabled.

CANCEL ROUTE GUIDANCE

To clear the route, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

QUICK POI SELECTION

1. Touch the map to display the additional options.
2. Touch the **Point Of Interest** (POI) soft key.
3. The screen shows 6 suggested categories, 5 of which can be selected as quick **Point Of Interest** (POI).
4. Select a Quick POI category, or touch **More** to see further POIs. Touch **Ok** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon and then touch **Set destination** to set and calculate the route.
6. Touch **GO** to start the journey.

*Note: Selected POIs can be hidden if required by selecting **Nav menu** followed by **Hide POI**.*

Note: POI icons can only be displayed up to the 1 km (½ mile) zoom level.

RESTORE SYSTEM DEFAULTS

From the Navigation menu, press **More...** and then select **Nav setup**. If you have made any changes to the system's default settings, use this menu to restore the original settings.

FAVOURITES

This enables you to manage destinations such as, place of work, home, favourite restaurant.

From the favourites sub-menu in stored locations, you can save up to 400 stored favourites.

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Favourite**.
4. To store a favourite, select **Add** from the sub-menu.
5. Select any destination entry method and confirm the desired location.

FAVOURITES DETAILS

1. From the **Stored locations** menu, select **Favourite**.
2. Select **Edit** or **Delete**.
3. Touch the selected favourite to display the details.
4. Select the chosen detail to edit. Details include **Attribute**, **Name**, **Phone number**, **Location** and **Icon**.

HOME

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Home location**.
4. To store a home location, select **Add** from the sub-menu.
5. Select any destination entry method to set your home location. Touch **Ok** to confirm.