

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorise the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

## VOICE GUIDANCE

To turn Voice guidance on or off, but maintain Route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when Voice guidance is enabled.

## CANCEL ROUTE GUIDANCE

To clear the route, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

## QUICK POI SELECTION

1. Touch the map to display the additional options.
2. Touch the **Point Of Interest** (POI) soft key.
3. The screen shows 6 suggested categories, 5 of which can be selected as quick **Point Of Interest** (POI).
4. Select a Quick POI category, or touch **More** to see further POIs. Touch **Ok** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon and then touch **Set destination** to set and calculate the route.
6. Touch **GO** to start the journey.

**Note:** Selected POIs can be hidden if required by selecting **Nav menu** followed by **Hide POI**.

**Note:** POI icons can only be displayed up to the 1 km (½ mile) zoom level.

## RESTORE SYSTEM DEFAULTS

From the Navigation menu, press **More...** and then select **Nav setup**. If you have made any changes to the system's default settings, use this menu to restore the original settings.

## FAVOURITES

This enables you to manage destinations such as, place of work, home, favourite restaurant.

From the favourites sub-menu in stored locations, you can save up to 400 stored favourites.

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Favourite**.
4. To store a favourite, select **Add** from the sub-menu.
5. Select any destination entry method and confirm the desired location.

## FAVOURITES DETAILS

1. From the **Stored locations** menu, select **Favourite**.
2. Select **Edit** or **Delete**.
3. Touch the selected favourite to display the details.
4. Select the chosen detail to edit. Details include **Attribute**, **Name**, **Phone number**, **Location** and **Icon**.

## HOME

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Home location**.
4. To store a home location, select **Add** from the sub-menu.
5. Select any destination entry method to set your home location. Touch **Ok** to confirm.