

Object detection while closing: If an object is detected that would interfere with a tailgate closing, tailgate movement will stop and then reverse to the fully open position, if able to do so. An audible warning will be given to indicate a mislock. Remove any obstructions and if the tailgate is open, press the tailgate button again to close the tailgate. If the tailgate is not open, press a tailgate release button to open the tailgate, remove any obstructions. Once the obstructions have been removed, press the tailgate close button to close the tailgate.



While the tailgate is open, the locking platform and latch are exposed. Do not manually close the latch, as it may also automatically 'soft close' and trap items or body parts.

## TAILGATE OPENING HEIGHT

It is possible to set the maximum height to which a powered tailgate will open. This is useful in parking areas with very low roofs or just for ease of use.

1. Open the tailgate to the position which you want to set as the maximum height. Press the tailgate open button to stop movement or position manually once all movement has stopped.
2. Make sure that the tailgate is stationary for at least 3 seconds.
3. To set the opening height: Press and hold the tailgate close button, on the tailgate, until you hear a chime.
4. Close the tailgate, then open again to check that it opens to the programmed height.

**Note:** If, after performing part 3 of the process the tailgate closes automatically, the required height has not been set. Repeat the process making sure all steps are adhered to.

To reset the maximum opening height to full, repeat the process, but manually move it to the fully open position before pressing and holding the button.

The powered tailgate may lose its position memory if there are multiple object detections or if the battery voltage is low. Powered operation may be inhibited.

To reset the tailgate:

1. Manually close the tailgate.
2. Press a tailgate release switch.
3. Allow the tailgate to power fully open or to the previously set position.
4. Press and release the close switch.
5. Allow the tailgate to power close fully.

The tailgate programmed position memory will now be restored.