


10. **CLIMATE** hard key. Shortcut to the Touch screen climate control menu.
  11. Temperature controls: For individual driver/passenger settings.
  12. Maximum defrost program.
  13. Maximum air conditioning (cooling) program.
  14. Heated windscreen: The heated windscreen will activate for a predetermined length of time.
  15. Heated rear screen: The heated rear screen will activate for a predetermined length of time.
-  Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the rear screen.
16. Air conditioning.
  17. Air recirculation: Press for timed air recirculation. Press and hold for latched (continuous) air recirculation. To cancel air recirculation, press the button again.
- Note:** *Prolonged use at low temperatures may cause the windows to mist.*
18. Blower speed control. In manual mode, the current speed selection is indicated in the integrated screen on the blower speed control. To switch off Climate control, rotate fully counter-clockwise, stop and then turn counter-clockwise again.

**Note:** *An indicator lamp in the switch will illuminate when the function is selected.*

**Note:** *To help keep the windows clear of ice, close the centre face-level vent and direct air flow from the outer face-level vents towards the side windows.*

**Note:** *The Climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form, but this is normal and no cause for concern.*

Timed climate controls the optional auxiliary heater and can be set from the **Extra features** menu. See **80, SETTING A TIME FOR TIMED CLIMATE OPERATION**.

## AUTOMATIC RECIRCULATION

If an air quality sensor is fitted, the climate control system will monitor exterior air pollution and select recirculation if it reaches a predetermined level. This feature only operates when selected from the **Settings** menu. Recirculation sensitivity can also be changed in the **Settings** menu. See **79, AIR QUALITY SENSOR**.

Pressing the recirculation button will deactivate automatic recirculation.

## AIR QUALITY SENSOR

The sensitivity of the air quality sensor can be adjusted using the Touch screen:

1. Select **Settings** from the **Climate** menu.
2. Touch the low, medium or high soft keys on the Touch screen to select the desired sensitivity.
3. To switch off air quality sensing, touch the off soft key.



The auto recirculation icon appears on the Touch screen when the air quality sensor is switched on.

## CLIMATE SEATS

**Note:** *The heated and/or climate seats will only operate when the engine is running.*

Heated and/or climate seats are controlled from the **Home** or **Climate** menus on the Touch screen or by the **CLIMATE** or seat menu hard keys.

**Note:** *The **Front seats** menu will be displayed. If fitted, the **Rear seats** menu is also accessible.*