



## MANUAL SEATS

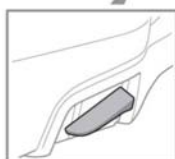

E149768

To adjust the angle of the seatback:

1. Lift and hold the adjustment lever.
2. Adjust the seatback to the desired angle.
3. Release the adjustment lever.

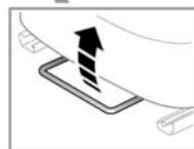

E159342

Forward and back adjustment.