



Disconnect: Use to end or reject a call.



No phone connected:



Phone signal strength indicator:



Phone battery level indicator:



Bluetooth: Indicates that a Bluetooth® wireless technology device is connected.



Tick: Indicates that a Bluetooth® wireless technology device is paired.



Voicemail: Press and hold to dial the stored voicemail number.



Scroll bar up arrow: Use to scroll up lists of detected phones, calls or phonebook entries.



Scroll bar down arrow: Use to scroll down lists of detected phones, calls or phonebook entries.

STEERING WHEEL CONTROLS



E 150938

1. Press to scroll back through received calls, the last 10 list and finally to exit the list.
2. Increase volume when in a call, scroll up a displayed list or number listed for stored contact.
3. Press to scroll to the last 10 list and received calls.
4. Decrease the volume when in a call or scroll down a displayed list or number listed for a stored contact.
5. Press to answer an incoming call. Press to end a call. Press and release to dial a number/contact. Press and release to access the last 10 dialled list. Press and hold to access the phonebook list view.

Note: When scrolling through a phonebook or the last 10 list, each contact is also displayed in the Message centre.

CALL VOLUME

The phone call volume is operated by the audio system's volume control.

If the audio system is in use when a phone call is active, the audio system source is suppressed for the duration of the call.