


## HALOGEN BULBS

- ⚠ Take care not to touch this type of bulb with your fingers. Always use a cloth to handle them. If necessary, clean the bulb with methylated spirits to remove any fingerprints.

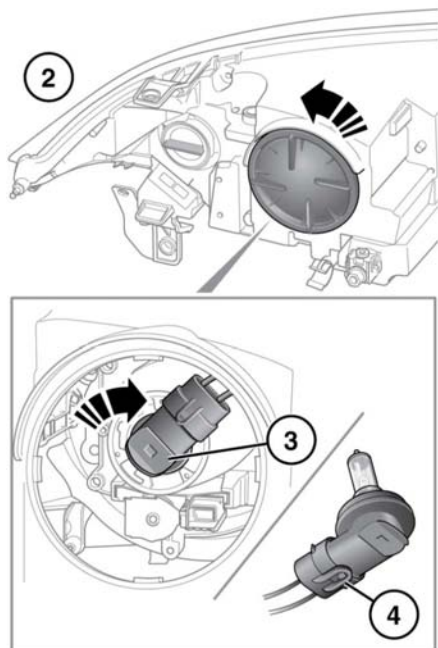

E 15 1046


1. Release the headlamp to gain access. See **212, HEADLAMP REMOVAL**.
2. At the rear of the headlamp unit, remove the cover. Turn it counter-clockwise to release.
3. Rotate the bulb holder clockwise to release it from the headlamp.

**Note:** Note the position of the locating lugs on the cover to aid refitting.

**Note:** Note the position of the locating lugs on the bulb holder to aid refitting.

4. Release the bulb from the retaining tags and remove bulb.
5. Insert the new bulb and repeat the above procedure in reverse order, for refitting.

## DIRECTION INDICATOR BULB REPLACEMENT

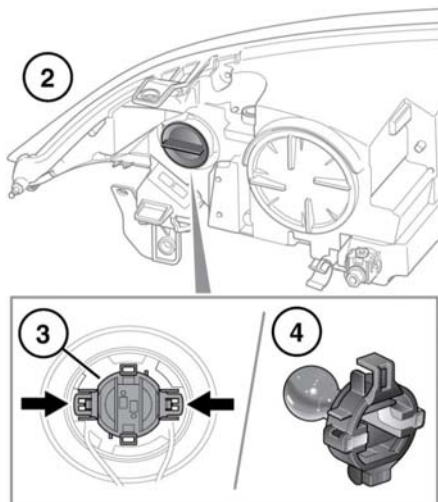

E 15 1051

1. Release the headlamp to gain access. See **212, HEADLAMP REMOVAL**.
2. Twist and lift off the cap.
3. Press the catches and pull the bulb holder from the unit.
4. Push and twist to remove the bulb.