

11. Touch or press to select the **Phone** menu.
12. Press to select the **Extra features** menu.
13. Touch to select a predetermined shortcut menu (if enabled).

Use the **Setup** and **System** menus to enable/disable, choose or change which menus are displayed on the **Home menu** screen. See **75, SYSTEM SETTINGS**.

TOUCH SCREEN USE

- ⓘ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting
- ⓘ Avoid spilling or splashing liquids onto the Touch screen.

Note: Do not wear gloves when operating the Touch screen.

TOUCH SCREEN CARE

- ⓘ Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/Authorised Repairer.

TOUCH SCREEN SETUP

Select **Setup** from the Touch screen **Home menu**. The **Setup** screen is divided into the following categories:

- Screen.
- System.
- Voice.
- Audio.
- Conversation assist.

SCREEN SETTINGS

Volume pop-up: Display Volume pop-up on/off.

Screensaver: Change screensaver.

Time out home: Sub menu selection screens can be set to revert to the **Home** menu after a pre determined length of time.

Theme: Changes appearance of the Touch screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to turn the soft key confirmation tone on/off.

Clock adjust: Select **12** or **24** hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store the new settings.

Note: The clock can also be adjusted from the Touch screen time display.

Home menu shortcuts: Select items from the displayed list, to be highlighted, and enable the shortcut menus to appear on the **Home menu** screen. Select **Clear** to deselect all the previous highlighted items and disable the shortcut menus from appearing on the **Home menu** screen. Alternatively, touch each highlighted item to deselect.

Select **Default** to enable the vehicle's predetermined shortcut menus to appear.

Language: Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

Note: Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.

Volume presets: Adjust the volume for the available systems (announcements, parking aid, phone, voice etc.).

VOICE SETTINGS

- **Command list:** View the categories and the acceptable voice commands.