
Rear seats

The split fold rear seat can be folded completely to accommodate large loads, or partially folded to accommodate large loads and still retain seating for passengers.

REAR SEAT ACCESS

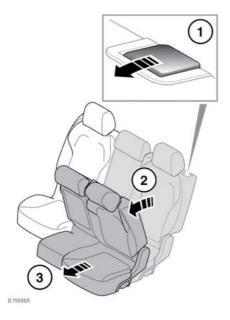

To access the third row seats:

- 1. Pull the seatback lever forwards.
- 2. Fold the seatback forward.
- 3. Slide the seat forwards.

To return the seat to the upright position, slide the seat rearward and raise the seatback until the latching mechanism clicks into position.



Make sure that when the seatback is raised, the locking mechanism is fully engaged.



When raising the rear seats, make sure that the seat belts are correctly routed into the seat belt guides and not trapped behind the seats.



Make sure that the head restraints are raised to the correct position before the seats are used by a passenger.