

Pressing the **i** soft key next to any command shows alternative ways of saying the same command.

- **Voicetags:** View the categories. Select a category to manage the voicetags for the chosen system. See **75, VOICE SETTINGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- **Preferences:** Select to alter the following settings:
 - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training program first.
To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
 - **Voice feedback:** Select **On/Off**.
 - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user. Select **User 1** or **User 2** and follow the on screen and audible instructions. See **170, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **169, USING VOICE CONTROL**.

SELECTING VALET MODE

While in Valet mode, the luggage compartment and glovebox are locked, preventing access to unauthorised persons, for example a parking attendant. The Touch screen is also inhibited, preventing access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered. To select Valet mode:

1. From the **Home** menu, select **Valet**.
2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet mode activated** is displayed to indicate that a PIN has been accepted.

The luggage compartment and glovebox are now securely locked in Valet mode and the Valet mode On screen is displayed.

DESELECTING VALET MODE

1. When you re-enter the vehicle, select **Valet**.
2. Enter your memorable 4 digit PIN and touch the **OK** button.

Valet mode deactivated is displayed to indicate that a PIN has been accepted.

- The luggage compartment and glove box will return to the previously set security requirement.
- The Touch screen will be enabled.

Note: If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.