

3. Right screen select.
4. Video source select.
5. Navigation summary.
Brazil only: 1/12 screen segment select.
6. Browse/TV channel list.
7. DVD menu.
8. Next track/file/channel/station.
9. Previous track/file/channel/station.
10. Play/Pause.
11. Repeat.
Brazil only: Repeat and 'Red' selections.
12. Information.
Brazil only: Information and 'Yellow' selections.
13. Subtitles on/off.
Brazil only: Subtitles on/off and 'Green' selections.
14. Press to select any available TV streams.
15. Cabin audio volume on/off.
16. Shuffle.
Brazil only: Shuffle and 'Blue' selections.
17. Cabin audio volume decrease/mute.
18. Cabin audio volume increase.
19. **Back**: Press to go back to previous menu.
20. Radio band select.
Brazil only: Radio band select and interactive TV select.
21. Audio source select.
22. **OK**: Press to confirm selection.
23. Cursor control: Up*.
24. Cursor control: Right*.
25. Cursor control: Down*.
26. Cursor control: Left*.

*These are multi-function keys depending on the source selected.

The rear media remote control can also be used to switch the selected audio between the vehicle's speaker system, and the Rear media headphones. To switch between the two outputs, press button **(15)** on the Rear media remote control.

USING RSE

To make sure the system responds to your selections, the upper end of the remote control should be pointed towards the appropriate rear screen.


To activate the system, press the rear media on/off button on the remote control, followed by the appropriate screen selection button.

Next, select the desired audio or video function button. Subsequent selections on the remote control will operate the last selected user system.

To avoid accidental operation of the wrong user system, it is advisable to always select the required user system before making any other selection.

Note: To prevent accidental damage, always store the remote control in the stowage area provided when not in use.

REAR MEDIA HEADPHONES

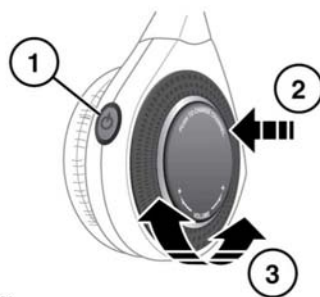

E150761

1. Press to turn on/off.