


## SURROUND CAMERA SYSTEM

The camera home page is accessed from **Extra features**. See 74, **TOUCH SCREEN HOME MENU**.

The camera hard key activates the Junction view if in non-reverse gears, or the reverse view if in Reverse (R).

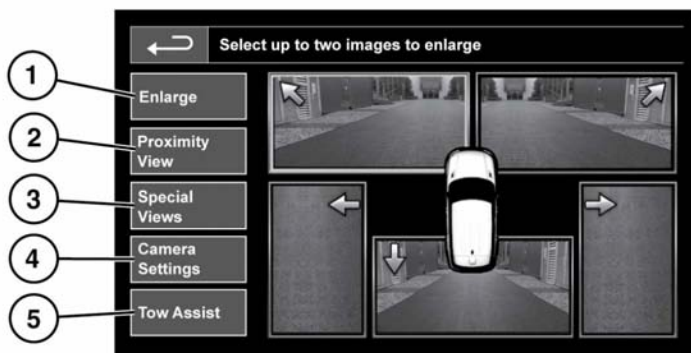

1. **Enlarge:** To enlarge a camera view, touch the image and then touch the **Enlarge** soft key. Any 2 images can be selected and enlarged to view side-by-side on the screen. When viewing the two images, one of them can be selected to view as a full screen image. It can then be zoomed into and panned around using the magnifier and arrow icons.

2. **Proximity View:** Proximity view can be accessed by touching *Proximity View* on the *Camera* home page. Touch to select a combination of 3 images from the front and passenger side cameras.  
Automatic Proximity View - Japan only:  
When Drive (D) or Reverse (R) is selected, the forward or rear view will be displayed. Once the vehicle's speed exceeds 18 km/h (11 mph) or the return icon is pressed, the camera screen will disappear.

3. **Special Views:** Touch to display a selection of preset views. They are provided to assist with difficult manoeuvres and are:

- **Kerb view:** Shows views from the 2 side cameras.
- **Junction view:** Shows views from the 2 side cameras.
- **Trailer view:** When towing, shows the rear camera view.

4. **Camera Settings:** Japan only: Touch to access the camera options page. To deactivate the semi-auto camera functionality select **Off**. The Proximity view is now only accessible by manual activation using the **Proximity View** soft key.

5. **Tow Assist:** Touch to display trailer guidance setup screen.