

When Limousine mode is turned on, the rear passengers will have control of the total cabin Audio system, and any shared sources via the remote control.

6. **Lock:** Touch to lock or unlock the Rear media remote control.
7. **System:** Touch to switch the selected Rear media system on or off.
8. Forward/Skip for the selected screen.
9. Touch to play the right rear screen's audio through the vehicle's speaker system.


**Note:** Only available when the Rear media system is in **Limo mode**.

10. **Source:** Touch to select the Rear media source selection menu.
11. Play/Pause for the selected screen.
12. Touch to play the left rear screen's audio through the vehicle's speaker system.

**Note:** Only available when the Rear media system is in **Limo mode**.

13. Rewind/Skip for the selected screen.
14. Rear media source selection menu: Touch the required media button.
15. **Source:** Touch to return to the **Rear media** control screen.

## REAR MEDIA REMOTE CONTROL

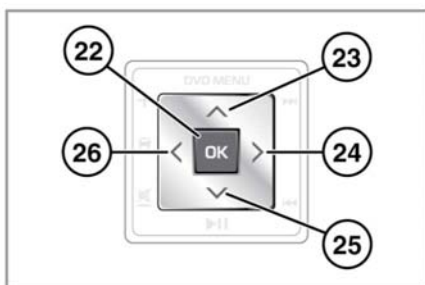

E 151273

1. Press and release to turn off the screen. Press and hold to turn off the rear media system.
2. Left screen select.