


RADIO CONTROLS

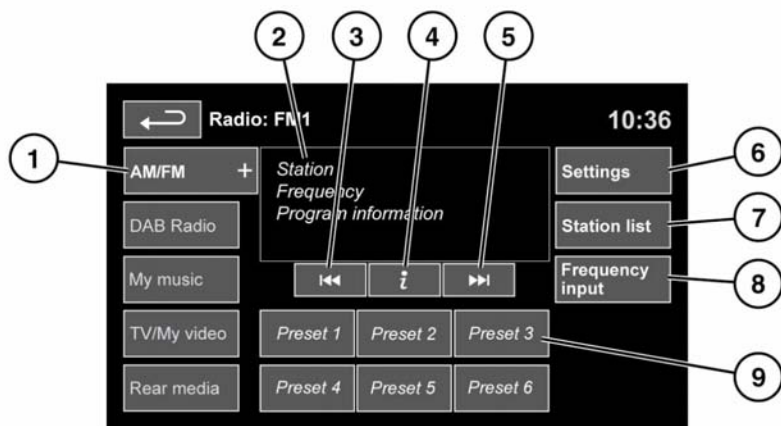

E149957

Press the **AUDIO/VIDEO** button, or touch the **Audio/Video** icon from the Touch screen Home menu.

- 1. AM/FM:** Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close. The waveband selection box will close automatically after 5 seconds without use.

- 2.** Displays information about the current station.

- 3. Seek down:**

- Short touch to auto seek down the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

Note: When manual seek is selected, auto seek cannot be selected for approximately 10 seconds.

- 4. Information:** More information from the broadcasting station.

- 5. Seek up:**

- Short touch to auto seek up the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.

- 6. Settings:** Touch to view and activate/deactivate the following features: **RDS**, **Traffic**, **News**, **AF** and **REG**. See **149**, **RADIO DATA SYSTEM (RDS)**.

- 7. Station list (FM only):** Select to view a list of available stations on the waveband. The list can be sorted by **Frequency**, **Name** or **PTY** (pop, news, sport etc.), by selecting the appropriate soft key. Touch to select the chosen station.