

NOTICE

When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.

1. To access the upper and lower luggage compartment fuse boxes, open the rear tailgate. See **12, OPENING AND CLOSING THE POWERED TAILGATE** Remove the first access panel. Grasp the top of the panel and pull sharply. A label on the rear of the access panel shows the circuits protected and the fuse locations.
 - When refitting the access panel, make sure the locating/securing pegs are aligned with their respective holes before pushing the panel fully home.
2. To access the passenger compartment fuse box open the glove box. See **91, STORAGE COMPARTMENTS** Firmly press the top of the support stay at each end, and lower the glove box into the foot well. A label on the rear of the glove box shows the circuits protected and the fuse locations.
3. To access the engine compartment fuse box remove the under hood cover. See **203, UNDER HOOD COVERS - REMOVAL** Release the clip at each end of the fuse box cover.
4. Lightly lift up the leaf screen panel to allow the removal of the fuse box cover.
5. Remove the fuse box cover. A label on the inside of the cover shows the circuits protected and the fuse locations.

CHANGING A FUSE

NOTICE

Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.

NOTICE

If the replacement fuse blows after installation, the system should be checked by your Land Rover Retailer/Authorized Repairer.

Note: Land Rover recommend that relays should only be replaced by qualified persons.

NOTICE

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.