


FLUID FILLER LOCATIONS

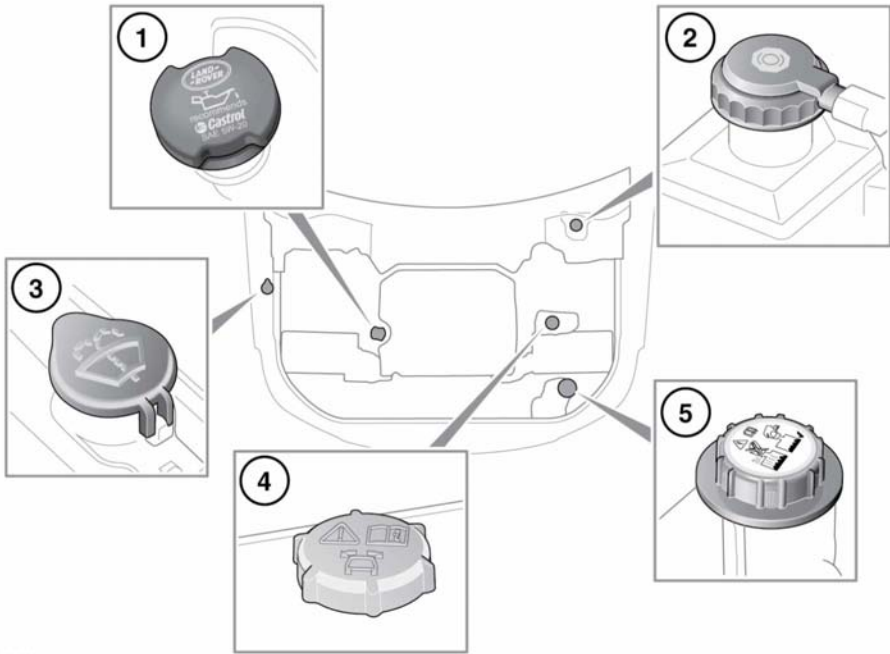

E139199

1. Engine oil filler cap.
2. Brake fluid reservoir cap.
3. Windshield washer fluid filler cap.
4. Dynamic response fluid reservoir cap.
5. Engine coolant filler cap.

⚠ WARNING

While working in the engine compartment, always observe the safety precautions. See 201, SAFETY IN THE GARAGE.

⚠ WARNING

Do not drive if there is a possibility that leaked fluid will come into contact with a hot surface, such as the exhaust.

CHECKING THE ENGINE OIL LEVEL

NOTICE

Check the engine oil weekly. If any significant or sudden drop in oil level is noted, seek qualified assistance.

NOTICE

If the message **ENGINE OIL PRESSURE LOW** is displayed, stop the engine as soon as it is safe to do so and seek qualified assistance. Do not start the engine until the cause has been rectified.

Prior to checking the oil level make sure that:

- The vehicle is on level ground.