

USING CRUISE CONTROL



In certain conditions, such as a steep gradient, the vehicle's speed may exceed the set cruising speed. This is because engine braking is unable to maintain or reduce the vehicle's speed. Driver intervention may be required.

Note: Cruise control is not available when using Hill Descent Control (HDC), or when the Sand, Mud or Rock Crawl Terrain response programs are selected.

Note: Do not use Cruise control when driving off-road.



E139183

- 1. SET+:** Press to set the speed or to increase the set speed. The Cruise control indicator illuminates to confirm that Cruise control is operational (see **50, CRUISE CONTROL (GREEN)**).

The cruising speed can also be increased using the accelerator. When the desired speed is reached, press the button to set and maintain the new speed.

Note: Cruise control can only be engaged at speeds above 32 km/h (20 mph).

- 2. RES:** Press to resume the set speed.



RES should be used only if the driver is aware of the set speed and intends to return to it.

- 3.** Press to decrease the set speed.

- 4. CANCEL:** Press to cancel, but retain the set speed in the memory.

Cruise control will also be cancelled if:

- The brake pedal is pressed.
- The gear selector is moved to Neutral (**N**) or Reverse (**R**).
- HDC or Dynamic Stability Control (DSC) are activated.
- The Electric Parking Brake (EPB) is applied.

The system is operated by controls mounted on the steering wheel. The driver can also intervene at any time, by use of the brake or accelerator pedals.

Note: If the accelerator pedal is pressed to over-ride Cruise control for a period of more than 5 minutes, Cruise control will be cancelled.