


## REAR CLIMATE CONTROL

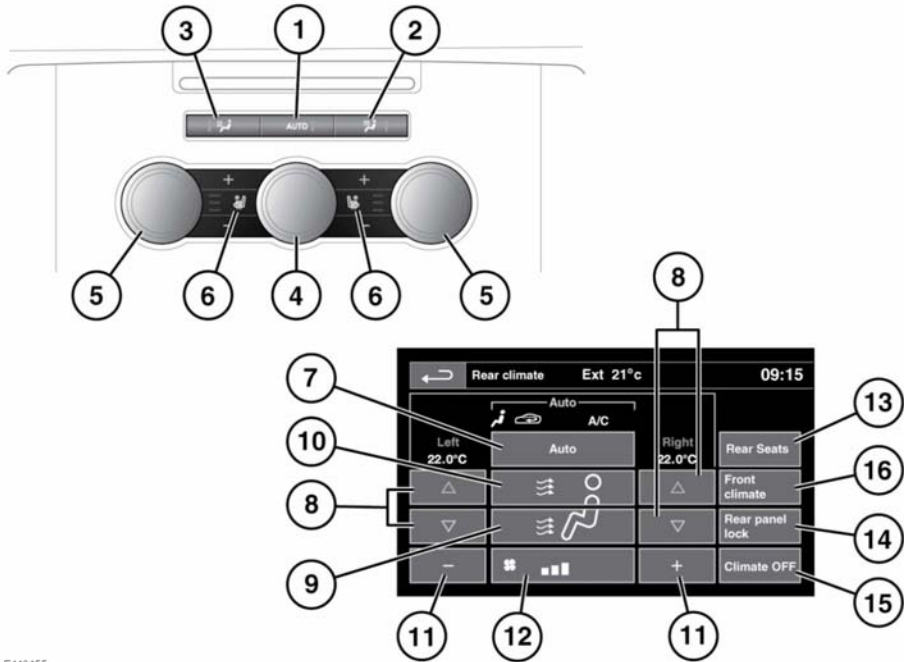

E143155

There are 2 types of Rear climate control: 3 Zone and 4 Zone. All of the 3 Zone controls will affect the whole of the rear passenger compartment. 4 Zone allows independent control of each side.

To access the Rear climate Touch screen menu, select **Rear climate** from the **Front climate** menu.

**Note:** When **DEFROST** is selected at the front, rear control is suspended until the defrost program ends.

**Note:** When the **Sync** button is selected on the **Front climate** screen the rear zones are controlled by the driver's settings.

**Note:** More than 1 setting, at a time, may be selected to achieve the desired air distribution.

1. Press **AUTO** to select full automatic mode operation. The system will adjust the heat output, blower speed, air intake, and airflow distribution, to maintain the selected temperature(s) without further adjustments. The air distribution and blower controls may be operated independently to override automatic mode. If you do this, the indicator lamp on the switch will go out. Press again to return to full automatic mode operation.
2. Air distribution to face. Press to switch on/off. The switch indicator illuminates when on.
3. Air distribution to feet. Press to switch on/off. The switch indicator illuminates when on.

4. Blower speed control. Rotate to adjust.
5. Temperature controls: Rotate to adjust between 16°C - 28°C (59°F - 83°F). The temperature selection is displayed on the Touch screen's **Rear climate** menu.
6. Heated/Climate seats temperature controls. Select the upper switch to increase and the lower switch to decrease. The 3 bar light display shows the temperature status.
7. Touch to select **AUTO** mode on/off.
8. Temperature controls: Select the red arrow to increase and the blue arrow to decrease. The temperature settings are displayed above the arrows.
9. Air distribution to the feet. Touch to switch on/off.
10. Air distribution to the face. Touch to switch on/off.
11. Blower speed control: Touch + or - to adjust the blower speed.
12. Blower speed indicator.
13. Touch **Rear seats** to adjust the Heated/Climate seats temperature settings.
14. Touch **Rear panel lock** to disable the Rear climate control switches, to prevent the rear passengers from adjusting the rear climate settings. Select again to re-enable the controls.
15. Touch **Climate OFF** to stop air flowing to the rear of the cabin.
16. Touch **Front climate** to open the **Front climate** menu.

In addition to the selectable controls, the Rear climate menu displays symbols that indicate the status of heating and ventilation functions.

**Note:** *If the Climate control system is switched off, pressing a rear **AUTO** button will switch the Climate control system on, unless disabled by the rear panel lock.*