


## ELECTRIC WINDOWS

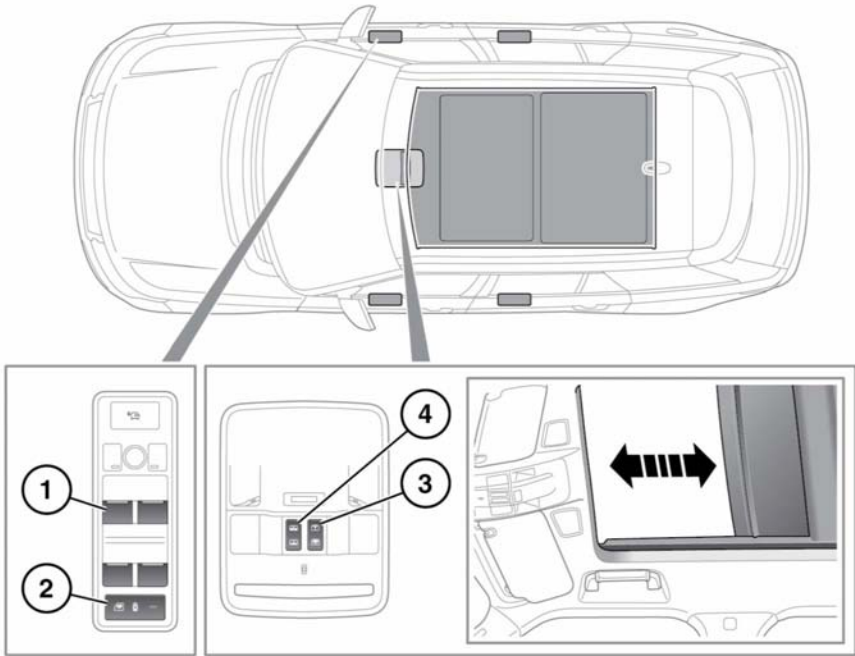

E149064

## 1. Window switches:

- To open a window: Press lightly at the front of the switch and release.
- To close a window: Pull-up lightly at the front of the switch and release.
- 1 touch open and close, press or pull firmly at the front of the switch and release.

**Note:** The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

## 2. Rear window isolator button.

**Note:** This will also isolate rear seat adjustment and activate the child safety locks.



**If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows, rear seats and doors. If the windows, rear seats or doors are operated by young children, there is a risk of serious injury or death.**



To prevent accidental operation, never leave the Smart key in the vehicle if children or animals are also left in the vehicle.

## 3. Panoramic roof blind switch:

- To open the blind: Press lightly at the rear of the switch and release.
- To close the blind: Press lightly at the front of the switch and release.