

To switch on the ignition without starting the engine:

1. Make sure the brake pedal is not pressed and that a valid Smart key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Release the engine **START/STOP** button.

❗ If the brake pedal is applied when the engine **START/STOP** button is pressed, the engine will start.

ROLLING RE-START


Note: The engine **START/STOP** button will be inhibited for 2 seconds after the engine has been switched off.

A rolling restart can be initiated by selecting Neutral (N) and pressing the engine **START/STOP** button.

KEYLESS START BACKUP

If the vehicle has been unlocked using the emergency key blade, or the Smart key is not detected by the vehicle, it will be necessary to use the Keyless start backup to disarm the alarm and start the engine.

The Keyless start backup can only be used when the message **Smart Key Not Found - Position As Shown And Press Start Button** is displayed in the Message centre.

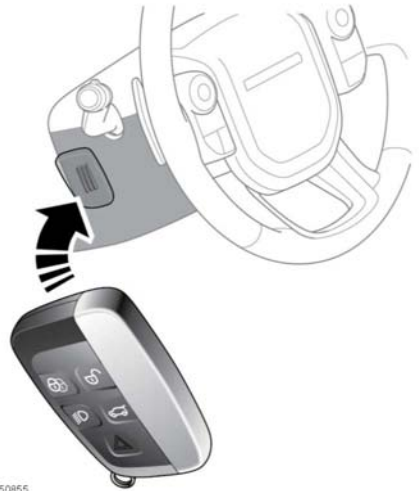

E150855

1. Position the Smart key flat against the side of the steering column with the buttons facing outwards.

Note: The steering column has markings on the side, to aid placement of the Smart key.

2. Press the brake pedal firmly.
3. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released, if it is safe to do so.

If the Smart key is not recognised, or the engine still fails to start, consult a Dealer/Authorised Repairer.

IF THE ENGINE FAILS TO START

Note: If the engine fails to crank when the engine **START/STOP** button is pressed, and there has been a recent collision, seek qualified assistance.

Starting the engine

Make sure that the brake pedal is not pressed. Switch on the ignition (see **110, STARTING THE ENGINE**) and check the Instrument panel for warning lamps and the Message centre for warning messages. See **44, INSTRUMENT PANEL MENU**. Seek qualified assistance, if necessary.

Switch off the ignition.

To reset the alarm system use a valid Smart key to lock and unlock the vehicle. See **4, UNLOCKING THE VEHICLE**.

***Note:** The following information applies to petrol vehicles only.*

If the engine persistently fails to start:

1. Make sure that a valid Smart key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Press the brake pedal firmly.
4. Make sure Park (**P**) or Neutral (**N**) is selected.
5. Slowly press the accelerator pedal fully and hold it in the fully pressed position.
6. Press and release the engine **START/STOP** button. The engine will begin to crank.
7. Release the accelerator pedal when the engine starts.

Once the engine has started, the brake pedal can be released, if it safe to do so.

If the engine still fails to crank or start, consult a Dealer/Authorised Repairer.