


SURROUND CAMERA SYSTEM

The Camera system's home page is accessed from **Extra features**. See **72, TOUCH SCREEN HOME MENU**.

The camera hard key activates the Junction view if in non-reverse gears, or the reverse view if in Reverse (R) gear.

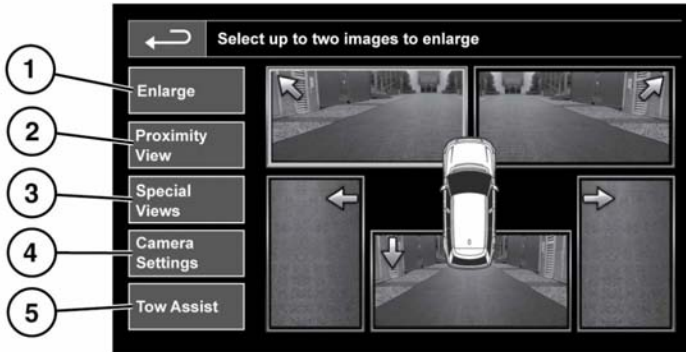

E152955

- 1. Enlarge:** To enlarge a camera view, touch the image and then touch the **Enlarge** soft key. Any 2 images can be selected and enlarged, to view side-by-side on the screen. When viewing the 2 images, 1 of them can be selected to view as a full screen image. It can then be zoomed into and panned around, using the magnifier and arrow icons.
- 2. Proximity View:** Proximity view can be accessed by touching **Proximity View** on the **Camera** home page. Touch to select a combination of 3 images from the front and passenger side cameras. Automatic Proximity View - Japan only: When either Drive (D) or R is selected, the forward or rear view will be displayed. Once the vehicle's speed exceeds 18 km/h (11 mph) or the return icon is pressed, the camera screen will disappear.
- 3. Special Views:** Touch to display a selection of preset views. They are provided to assist with difficult manoeuvres and are:

 - **Kerb view:** Shows views from the 2 side cameras.
 - **Junction view:** Shows views from the 2 side cameras.
 - **Trailer view:** When towing, shows the Rear camera view.
- 4. Camera Settings - Japan only:** Touch to access the camera options page. To deactivate the Semi-auto camera functionality, select **Off**. The Proximity view is now only accessible by manual activation, using the **Proximity View** soft key.
- 5. Tow Assist:** Touch to display the trailer guidance setup screen. See **156, TRAILER GUIDANCE**.

Note: To maintain optimum performance, the cameras should be kept free from ice, frost, and dirt.