

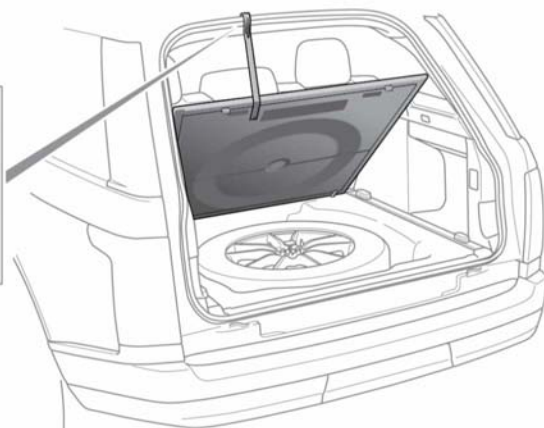


Wheel changing

TOOL KIT

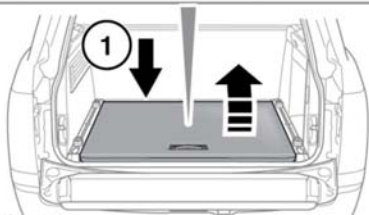

E152047

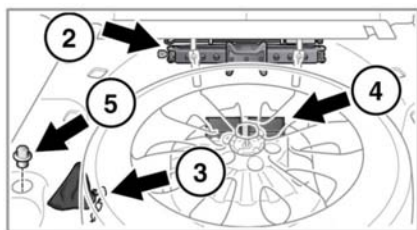

E152218

Note: Tool types and positions may vary from the illustration.





1. Loadspace floor panel.
2. Jack.
3. Spare wheel lift assist tool.
4. Tool kit - located under the spare wheel.
See 264, REMOVING THE SPARE WHEEL.

5. Locking wheel nut adaptor.

Note: Examine the jack occasionally, clean and grease the moving parts, particularly the screw thread, to prevent corrosion.

Note: Take careful note of the stowage position for each tool, as it is important to return them to their correct position after use.

REMOVING THE SPARE WHEEL

-  Remove the spare wheel before jacking the vehicle, to avoid destabilising the vehicle when raised.
-  Wheels are heavy, and if handled incorrectly, may cause injury. Use extreme caution when lifting, lowering, and manoeuvring the wheels.
-  Always secure the spare wheel, or the removed wheel, in the correct position, using the retaining bolt.
-  Do not stow the wheel while the vehicle is raised on the jack.