


TELEVISION CONTROLS

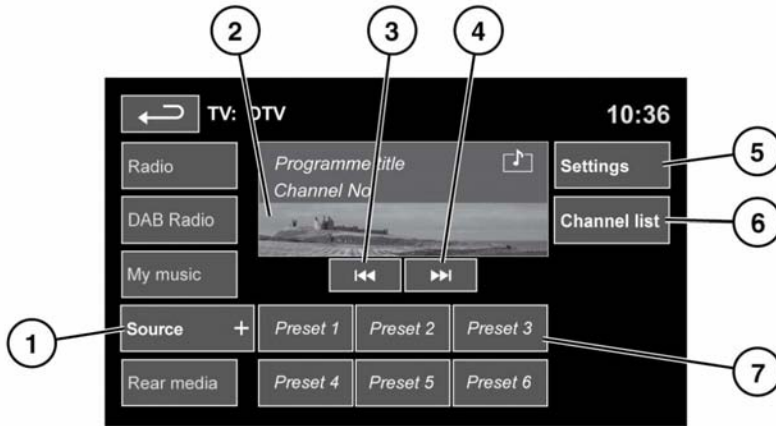

E151176

⚠ In the interest of safety, only operate, adjust or view the system when it is safe to do so.

⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

1. **Source** TV band/video input selection:

- Touch **Source** to view and select either digital (**DTV 1** or **DTV 2 - Digital**) or analogue (**TV - Analogue**) TV reception, CD/DVD, USB, or iPod.

When changing between analogue and digital bands, this will cause the last tuned channel on the new band to be displayed. When changing between digital bands, the current channel will be displayed.

Note: After 5 seconds without use, the TV/My video menu will close.

2. Preview screen for TV programme: Touch to select full screen mode.

Short touch the screen again to view the controls and Electronic Programme Guide (EPG) information at any time. To return to preview mode, touch and hold the full screen view.

3. **Seek down:** Select to view the previous channel on the TV channel list.
4. **Seek up:** Select to view the next channel on the TV channel list.
5. **Settings:** Select to switch traffic and news announcements on or off, to select analogue TV or to select an alternative country analogue TV format, if necessary, when travelling abroad.

Note: Digital TV is not affected by a change of country.
6. **Channel list:** Select to view an alphabetical list of all TV channels currently available.
 - A small preview of the current channel and programme title is also displayed.
 - Touch a listed channel to change the preview and title to the new channel.
 - Touch the preview to view that channel.