

## TRAILER GUIDANCE

**Note:** Trailer guidance requires a connected trailer to be fitted with a tracking target sticker, which **must** be attached according to specific instructions. Ask your Dealer/Authorised Repairer for details.



E134952

**Note:** This feature may not operate with all trailer designs.

Trailer guidance aids with trailer reversing, by displaying guide lines on the Touch screen.

Trailer guidance becomes active when a trailer/caravan is attached to the vehicle and the trailer's electrical plug is attached to the vehicle's socket.

**Note:** The driver's door must be opened and closed after the trailer/caravan is connected to the electrical socket, before the system will detect the connection.

The screen will display a choice for connection. Select **YES** to move to the setup screen. Select **NO** to return to the previous screen.

**Note:** If the connection is not detected, setup can be manually prompted by touching the Tow Assist soft key on the Camera menu.

On first use, the setup screens take the user through a series of configuration options for the connected trailer. Information, such as trailer length, number of axles, and camera preference, is required to finalise setup. Once completed, the details are stored for future use.

When a new or existing trailer configuration is selected, Trailer guidance automatically displays on the Touch screen when Reverse (**R**) gear is selected. Coloured lines are displayed, to indicate the predicted path of both the trailer and the vehicle.