



E142571

To improve aerodynamics, the vehicle is fitted with active vanes that open only when the engine's temperature rises or when the air conditioning is turned on. The active vanes must be opened manually to allow access to clean any debris from the radiator and the air conditioning condenser after off-road driving.

1. Start the engine and allow it to run for a few seconds. See **110, STARTING THE ENGINE.**
2. Switch off the engine.
3. Switch on the ignition. See **110, SWITCHING ON THE IGNITION.**
4. Select Sand mode on the Terrain response system. See **149, TERRAIN RESPONSE OPERATION.**
5. Switch off the ignition.
6. Using a hose pipe, direct clean water through the front bumper (where shown) to remove mud from the radiator and air conditioning condenser.

## THE INTERIOR



Some cleaning products contain substances that are harmful and can cause health problems if used incorrectly, and may cause damage to the interior.

## FABRIC UPHOLSTERY



Do not polish the Instrument panel. Polished surfaces are reflective, and may interfere with the driver's view.

Clean plastic or cloth-faced surfaces with warm water and non-detergent soap, and then wipe clean with a soft cloth.

## LEATHER UPHOLSTERY



Only use cleaning products specifically designed for use on leather. Do not use chemical, alcohol, or abrasive materials, as they will cause rapid deterioration of the leather. The use of products which are not approved, will invalidate your warranty.



If you are in any doubt as to which products to use, consult your Dealer/Approved Repairer.

Leather should be cleaned and protected at least every 6 months.

To prevent ingrained dirt and staining, inspect the seat upholstery regularly, and clean every 1 to 2 months as follows:

1. Wipe off fine dust from the seat surfaces using a clean, damp, non-coloured cloth. Avoid over wetting the leather.
2. If this is not sufficient, use a cloth which has been dampened with warm, soapy water and then wrung out. Use only mild non-caustic soap.