

- hill start assist.....125
- intelligent braking.....126
- lane departure warning lamp (green).....51
- lane departure warning lamp (red).....48
- low oil pressure.....47
- park assist limitations.....137
- park assist troubleshooting.....137
- rain sensor.....58
- resume ACC follow mode.....144
- resume ACC set speed.....144
- running-in.....220
- selecting park assist.....136
- sitting correctly.....17
- steep slope control with ABS.....125
- using ACC.....142
- using cruise control.....141
- weekly checks.....221
- Driving abroad
 - beam pattern.....54
 - headlamps.....54
- Driving short distances
 - diesel particulate filter (DPF).....222
- Dual view.....178
 - controls.....178
- Dynamic response
 - fluid level.....234
 - fluid specification.....235
 - fluid top up.....235
- Dynamic stability control (DSC).....120
 - DSC active warning lamp.....48
 - DSC off warning lamp.....49
 - switching off.....120
 - switching on.....120
- E**
- Easy route.....202
- Eco-data controls.....115
- Electric parking brake.....126
- Electric rear seats
 - reclining.....21
- Electric seats.....16
 - head restraint removal.....25
 - head restraints.....24
 - passenger seat away.....22
- position memory.....18
- restricted seat travel.....17
- Electric windows
 - operation.....69
- Electronic brake force distribution.....125
- Electronic data.....276
- Email
 - inControl connection.....193
- Emergency (navigation).....204
- Emergency brake assist.....125, 147
- Emergency call
 - inControl link.....192
- Emergency key locking.....15
- Engine
 - antifreeze level.....232
 - compartment opening.....223
 - coolant level.....232
 - diesel fuel.....214
 - diesel particulate filter (DPF).....221
 - engine compartment
 - poisonous fluids.....223
 - oil level.....230
 - petrol fuels.....213
 - running-in.....220
 - specifications.....278
 - starting
 - keyless start backup.....111
 - switching off.....110
- Engine/transmission warning lamp.....48
- Engine compartment
 - fluid filler locations.....230
- Engine covers
 - refitting.....225
 - removal.....225
- Engine emissions data.....279
- Engine oil
 - capacity.....282
- Engine performance data.....278
- Engine starting.....110
 - failure to start.....111
- Engine temperature warning lamp.....47
- Entering a destination.....201
- Entering the vehicle
 - entry and exit mode.....26