

If the vehicle does run out of fuel, a minimum of 4 litres (0.9 gallons) will be required to restart the engine. The vehicle should be left with the ignition on for 5 minutes after refuelling, before attempting to restart the engine. The vehicle will need to be driven 1.6 - 5 km (1 - 3 miles), in order to reset the engine management and monitoring systems.

Note: *If the vehicle does run out of fuel, seeking qualified assistance is advisable.*

Diesel engines

Vehicles with diesel engines are equipped with a system to prevent the fuel tank from emptying completely. When the fuel reaches a minimum level, the system will activate a reduced power mode (i.e., the engine will not run properly). This will be followed by the engine stopping in approximately 1.6 km (1 mile).

This feature prevents the fuel system from running dry, which could cause damage to the vehicle. If the gauge indicates low fuel or the warning indicator illuminates, the fuel tank should be refuelled as soon as possible at the next filling station, with at least 4 litres (0.9 gallons) of fuel.

If the system's protection function has activated, the vehicle must firstly be refuelled, then restarted using the following procedure:

1. With the brake pedal pressed, press and hold the engine START/STOP button and crank the engine for 5 seconds.
2. Release the START/STOP button.
3. With the brake pedal pressed, press and release the START/STOP button to crank the engine. The engine should start within approximately 5 seconds.

Note: *If the engine does not start, pause for 10 seconds with the ignition in convenience mode, before repeating the procedure from the beginning.*



Do not crank the engine for longer than 30 seconds continuously.

FUEL FILLER FLAP



Take note of all warnings and instructions given on the label affixed to the inside of the filler flap.

The fuel filler flap is located on the right side of the vehicle, at the rear.

1. Make sure the vehicle is fully unlocked and press the left side of the flap to unlatch it.
2. Open the flap fully.
3. Twist the cap counter-clockwise to release.
4. Use the retaining clip, to keep the filler cap out of the way while fuelling.
5. After refuelling, tighten the cap until it clicks 3 times. Close the filler flap and push until it is latched shut.

FUEL FILLER



When refuelling, make sure that all of the windows, doors, and the sunroof are fully closed, particularly if young children or animals are in the vehicle.



Do not attempt to fill the tank to its maximum capacity. If the vehicle is to be parked on a slope, in direct sunlight, or high ambient temperature, expansion of the fuel could cause spillage.



Do not operate the auxiliary heater when refuelling the vehicle. Doing so, may cause fuel vapours to combust, causing a fire/explosion.



Check the fuel pump's information carefully, to make sure you are putting the correct fuel into the vehicle.



If the vehicle is filled with the incorrect fuel, it is essential that you seek qualified assistance before you start the engine.