


## SEAT MESSAGE

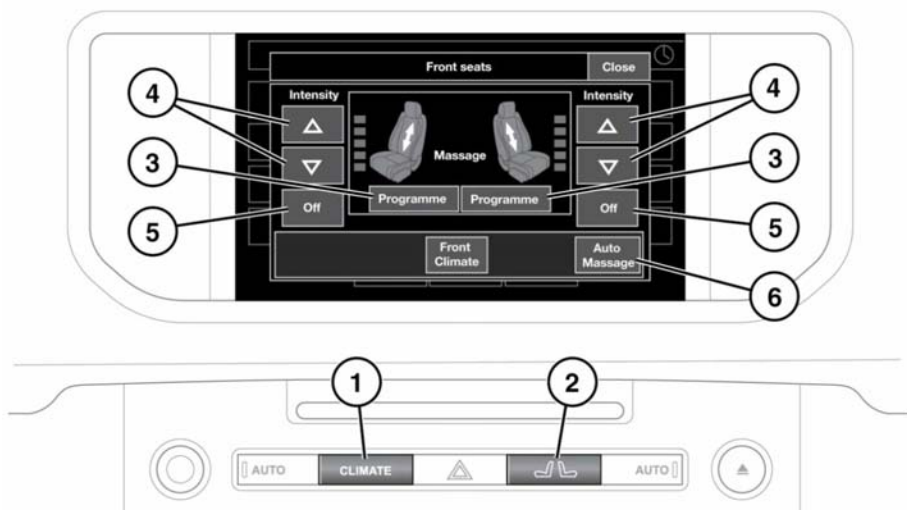

E142867

**Note:** Seat massage may not operate when the vehicle's interior temperature is below 0°C, or above 50°C (32°F or 122°F respectively).

Seat massage is controlled through the Touch screen. Either:

1. Press to display the Front Climate menu. Touch the **Seats** soft key, then touch the **Message** soft key or;
2. Press to display the Front seats pop-up menu, and then touch the **Message** soft key.
  - The pop-up menu screens will overlay the current screen. They will time-out after a short period and the previous menu screen will be displayed.
3. Touch to display the desired Seat massage program. Constant selection will scroll through the 5 different programs.
4. Touch to vary the intensity of the selected program.

5. Touch to end the program.
6. Touch to display a menu which allows the driver's seat auto massage to be switched **On** or **Off** and to set the time delay from the start of the journey to **5, 15, 30** or **60** minute intervals.

After 10 minutes, Seat massage will stop automatically.

## AUXILIARY HEATER

Your vehicle may be fitted with an auxiliary heater, which is powered by fuel drawn from the vehicle's tank. The heater operates at low ambient temperatures. Alternatively, it can be controlled by the Timed climate control system, or from the Timed climate remote control.

When the heater is operating, exhaust fumes from the heater may be visible exiting from under the front of the vehicle. This is normal and is not a cause for concern.