

# Exterior lights

- Reverse gear is selected.
- The vehicle is stationary.
- Daytime running lamps are on.

If a system fault is detected, the headlamps will attempt to move to the central position, and remain stationary. The AFS warning lamp will illuminate to indicate that a fault is present. See **49, ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)**.

## HEADLAMPS - DRIVING ABROAD

The headlamps have a beam pattern that eliminates the need to mechanically adjust the lamps or add any external stick-on decals.

To configure the High beam assist system for the side of the road on which you are driving, proceed as follows:

1. Using the menu control on the steering wheel, select **Vehicle Set-Up** via the Message centre.
2. Select **High Beam Assist**.
3. Select **Drive on Left** or **Drive on Right**, for the side of the road that you are driving.

## HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.